




THE PURSUIT OF FREEDOM

FLY OFFROAD DOOR HANGERS

PART NUMBER: 1195-23001 (SET of 2) or 1195-23002 (SET of 4)

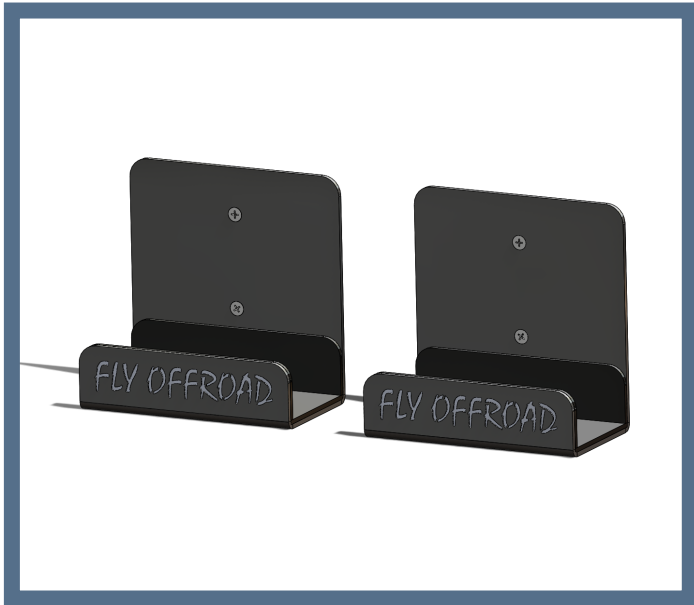

FLY OFFROAD DOOR HANGERS

BEFORE YOU BEGIN

Thank you for purchasing these Fly Offroad door hangers and joining us in The Pursuit of Freedom! Please inspect package contents upon opening. Ensure it is complete according to the parts list below and that none of the contents are damaged or missing. If there are any discrepancies please contact Fly Offroad at info@flyoffroad.com and we will correct the error ASAP. These instructions are to serve as a general guide... as the saying goes there is a thousand ways to skin a cat. We aim to take the picture worth a thousands words approach with little words to help guide you to successful looking Fly .

“Named must be your fear before banish it you can”

-Yoda

DOOR HANGERS

1195-23001 Set of 2

Door Hangers.....2
Mounting Screws.....4

1195-23002 Set of 4

Door Hangers.....4
Mounting Screws.....8

NEED TO KNOW

- How to use a tape measure
- Where to find your tools...
- How to find a stud...
- How to use a screw gun

TOOLS NEEDED

- Screw gun
- Philips bit
- Tape Measure
- Working brain

IMPORTANT INFORMATION

The installation screws provided are for installing on a wall with wood studs. If anchoring to a wall without wood studs an alternate fastening solution will be necessary. Due to the weight distribution of the doors. The door may need to rest on the door hanger slightly off-center. It may be wise to find the center of gravity of each door to help with your installation measurements.

Feel free to contact Fly Offroad before you begin the installation if you have any questions or concerns.

